

SensaGuard Rectangular Flat Pack

(These instructions are only for the Series B Version.)

Catalog Numbers 440N-Z21SS2H, 440N-Z21SS2A, 440N-Z21SS2B, 440N-Z21SS2J, 440N-Z21SS2HN, 440N-Z21SS2AN, 440N-Z21SS2BN, 440N-Z21SS2JN, 440N-Z21SS2HN9, 440N-Z21SS2AN9, 440N-Z21SS2BN9, 440N-Z21SS2JN9, 440N-Z21SS2H-AS, 440N-Z21SS2HN9-FF, 440N-Z21XS2H, 440N-Z21US2A, 440N-Z21US2B, 440N-Z21US2H, 440N-Z21US2AN, 440N-Z21US2BN, 440N-Z21US2HN, 440N-Z21US2AN9, 440N-Z21US2BN9, 440N-Z21US2HN9, 440N-Z21US2J, 440N-Z21US2JN, 440N-Z21US2JN9, 440N-Z21US2H-C, 440N-Z21XU2H

IMPORTANT SAVE THESE INSTRUCTIONS FOR FUTURE USE.

Topic	Page
Introduction	1
Additional Resources	2
Technical Specifications	2
Dimensions	3
Mode of Operation — Status Indicator	3
Mounting Information	3
Diagnostics	3
Typical Wiring Diagram	4
Commissioning (Unique Coded Units) — Power the Sensor	4
OSSD Test Pulses	5
Timing Diagram	6
Troubleshooting	7
Application Wiring Examples	8

Introduction

Installation must be in accordance with the following instructions and specifications and implemented by suitable competent personnel. Adherence to the recommended maintenance instructions forms part of the warranty.

This unit is not to be used as a mechanical stop. Guard stops and guides must be fitted.

This device is intended to be part of the safety-related control system of a machine. Before installation, a risk assessment is performed to determine whether the specifications of this device are suitable for all foreseeable operational and environmental characteristics.



WARNING: Do not defeat, tamper, remove, or bypass this unit. Severe injury to personnel could result.



ATTENTION: This device must be provided with a 24V DC PELV or SELV power supply that conforms to the requirements of 414-3 of IEC 60364-4-41 where provisions have been taken. To confirm that, even if an internal fault, the voltage at the outgoing terminals cannot exceed 60V DC.

Improper selection or installation of the devices affects the integrity of the safety systems.

Personal injury or death, property damage, or economic loss can result.

Comply with ISO 14119 including section, accessibility to the installation, arrangement, and mounting, possible substitute actuation, access to the escape release, motivation to defeat, and actuation mode.

Management controls, working procedures, training, and additional protective measures can be used to minimize the motivation to defeat and to manage the use and availability of spare actuators.

Comply with ISO 13857 and ISO 13855 for guard openings and minimum (safe) distances.

Comply with IEC 62061 or ISO 13849-1 and ISO 13849-2 for functional safety.

SensaGuard™ Series A and Series B non-contact switches will only work with the appropriate series actuator. Series A and Series B actuators can be purchased separately.

This product is intended for industrial/business application only. It is not intended to be used in residential applications as it may cause radio interference on other residential devices.



ATTENTION: Read this document and the documents that are listed in the Additional Resources section about installation, configuration, and operation of this equipment before you install. Users are required to familiarize themselves with installation and connection instructions and requirements of all applicable codes, laws, and standards.

In accordance with applicable codes of practice, suitably trained personnel are required to implement installation, adjustments, service initiation, use, assembly, disassembly, and maintenance.

If this equipment is used in a manner that the manufacturer does not specify, the protection that is provided by the equipment can be impaired.

Additional Resources

Resource	Description
Industrial Automation Wiring and Grounding Guidelines, publication 1770-4.1	Provides general guidelines for installing a Rockwell Automation® industrial system.
Product Certifications website at Rockwell Automation Technical Data	Provides declarations of conformity, certificates, and other certification details.

You can view or download publications (including translations) at [Literature Library](#). To order paper copies of technical documentation, contact your local Allen-Bradley distributor or Rockwell Automation sales representative.



ATTENTION: Do not attempt to install this device unless the installation instructions have been studied and understood. This document acts as a guide for a typical installation and is available in additional languages at [Literature Library](#).

Technical Specifications

Attribute	Value
Safety Ratings	
Standards Safety Classification	IEC 60947-5-3, Cat. 4 PLe Per ISO 13849-1, Type 4 interlocking device according to ISO 14119 with either low (standard) or high (unique) coding, SIL CL3 per IEC 62061 and IEC 61508
Functional Safety Data	PFH _D = 1.32E-9 (Probability of dangerous failure per hour) T1 = 20 (Proof test interval)
Certifications	CE marked for all applicable directives, c-UL-us (UL 508), and TÜV, see Rockwell Automation Technical Data
Operating Characteristics	
Sensing distance, Assured ON	15 mm (0.59 in.)
Sensing distance, Assured OFF	25 mm (0.98 in.)
Operating voltage	24V DC 10%/-15% Class 2 SELV or PELV power supply
Response time (Off)	45 ms
Utilization Category according to Ue Ie	DC-12 and DC-13 24V 200 mA
Frequency of operating cycle	0.25 Hz
No-load supply current	< 50 mA
Outputs (OSSD)	
Safe state	De-energized (2 x PNP, 0V), AUX energized (1 x PNP, 24V)
Run state	Energized (2 x PNP, 24V), AUX de-energized (1 x PNP, 0V)
Load current	200 mA maximum
Voltage drop	< 1.5V
Switches connected in series	Unlimited, see Timing Diagram on page 6 .
Mechanical	
Sensor case material	Polycarbonate
Actuator case material	Polycarbonate
Environmental	
Operating temperature	-25...+70°C (-13...+158°F)
Operating humidity	5...95% relative
Washdown rating	IP66, IP67, IP69K
Shock and Vibration	IEC 60068-2-27 — 30 g, 11 ms IEC 60068-2-6 — 10...55 Hz
Pollution Degree	IEC 60947-1 — 3
Electro-magnetic Compatibility (EMC)	
Electrostatic Discharge ESD	IEC 61000-4-2: air discharge Per IEC 61326-1 (functional): 8 kV Per IEC 61000-6-7 (fail-safe): 8 kV
Radiated EMF immunity	IEC 61000-4-3 Per IEC 61326-1 (functional): 10V/m Per IEC 61000-6-7 (fail-safe): 20V/m
Electrical Fast Transient/Burst Immunity	IEC 61000-4-4 Per IEC 61326-1 (functional): 2 kV/5 kHz Per IEC 61000-6-7 (fail-safe): 2 kV/5 kHz
Conducted Immunity	IEC 61000-4-6 Per IEC 61326-1 (functional): 10V Per IEC 61000-6-7 (fail-safe): 20V
Rated Impulse Withstand Voltage	IEC 60947-1: 1 kV
Protection	Short circuit, overload, reverse polarity, overvoltage, loss of ground

Dimensions

Figure 1 - Actuator [mm (in.)]

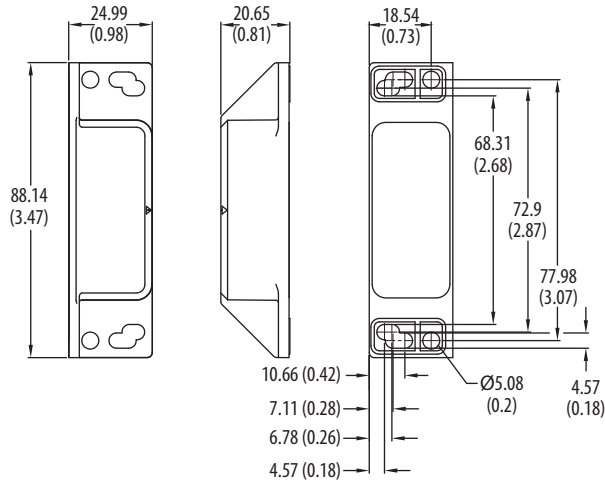


Figure 2 - Sensor Dimensions [mm (in.)]


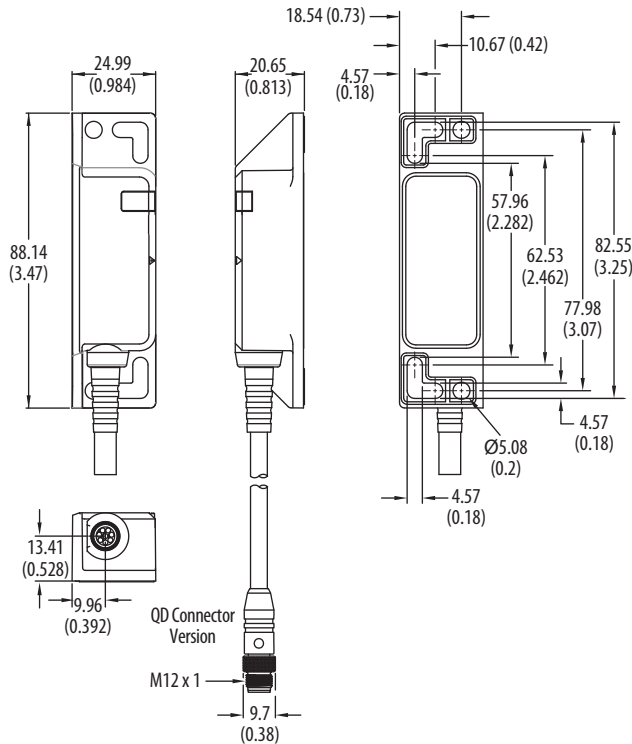


Figure 3 - Mode of Operation — Status Indicator

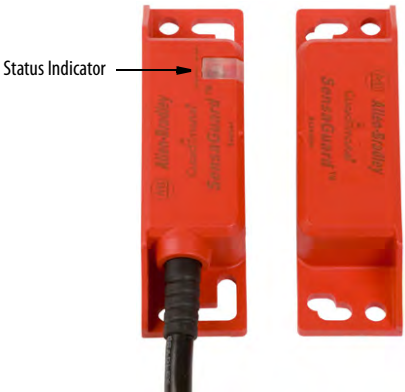

The actuator is supplied with the sensor.

Diagnostics

Table 1 - Unit Indicators

Status/Diagnostic Indicator	State	Status	Troubleshooting
	Off	Not powered	—
	Red	OSSD not active	—
	Green	OSSD active	—
	Green flash	Power up test or OSSD inputs not valid	Check 24V DC or OSSD inputs (yellow or red wire)
	Red flash	0.5 Hz flash OSSD fault	OSSD fault—check OSSD outputs are not shorted to GND, 24V DC or each other
		2 Hz flash internal fault	Cycle power
	Amber flash	Actuator at maximum sensing range (-N and -N9 models only)	Move actuator closer to sensor

See [Unique Coded Diagnostic on page 5](#) for learning sequence errors.

Mounting Information

Use non-removable screws, bolts, or nuts to mount the switch and actuator. Do not over torque the mounting hardware. Position the switch and actuator so they are aligned with each other.

Nut Torque Specification

Switch/Actuator: 2.20 N•m (19.5 lbs•in)

Figure 4 - Minimum Distance between Sensors


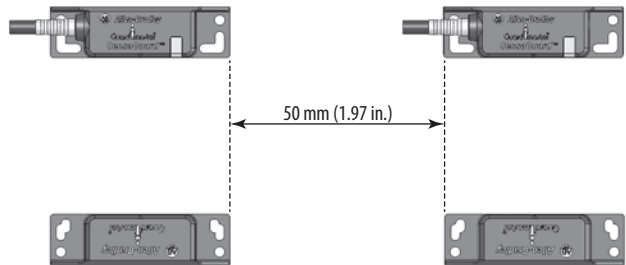


Figure 5 - Misalignment Curve

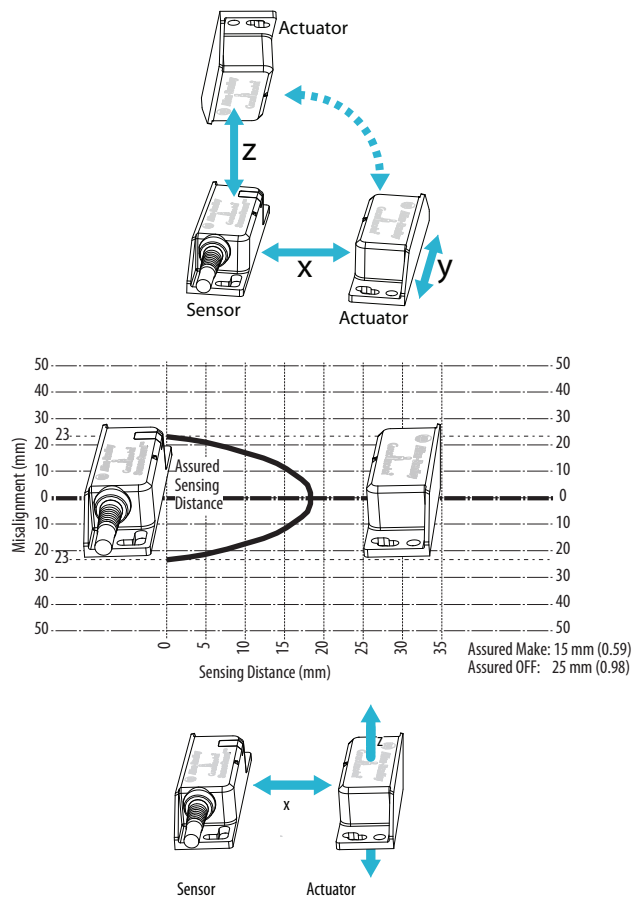

Typical Wiring Diagram

Table 2 - 8-pin Unit

Pin Number	Wire Color	Signal
1	White	Auxiliary Output
2	Brown	24V DC
3	Green	—
4	Yellow	OSSD 2 Input
5	Gray	OSSD 1 Output
6	Pink	OSSD 2 Output
7	Blue	0V
8	Red	OSSD 1 Input

Recommended cable connection, 2 m (6.5 ft)—889D-F8AB-2. Replace the 2 with 5 (5 m [16.4 ft]) or 10 (10 m [32.8 ft]) for standard cable lengths.

Table 3 - Five-pin Unit

Pin Number	Color	Signal
1	Brown	+24V
2	White	Safety OSSD 1 Output
3	Blue	0V
4	Black	Safety OSSD 2 Output
5	Gray	Auxiliary Output

The recommended cordset is 2 m (6.5 ft) - 889D-F5AC-2. For additional lengths, replace the 2 with 5 (5 m [16 ft]) or 10 (10 m [32.8 ft]) for standard cable lengths.

IMPORTANT If you do not require the auxiliary signal, a 4-pin cordset (889D-F4AC-2) can be used.

The recommended patchcord for use with ArmorBlock® Guard I/O™ module is 2 m (6.5 ft) - 889D-F4ACDM-2. Replace the 2 with 0M3 (0.3 m [0.98 ft]), 1 (1 m [3.28 ft]), 5 (5 m [16.4 ft]), or 10 (10 m [32.8 ft]) for standard cable lengths.

IMPORTANT Do not use a five-pin patchcord with the ArmorBlock® Guard I/O™ module.

Commissioning (Unique Coded Units) — Power the Sensor

Connect the sensor to 24V DC (see [Typical Wiring Diagram on page 4](#) for help).

IMPORTANT The unique coded sensor is shipped from the factory unprogrammed and must be taught a unique coded actuator, see [Teaching the Actuator \(Ability to Learn an Additional Actuator\)](#).

A unique coded sensor can only learn a unique coded actuator and cannot learn a standard coded actuator.

A standard coded sensor does not work with a unique coded actuator.

The unique coded sensor, “Status/Diag” indicator, begins to blink green eight times then repeats, which indicates that the sensor has not yet learned an actuator.

The unique coded sensor can be locked so it cannot learn another actuator, see [Teaching the Unique Actuator \(One Time Learn Only; Unit Locked\) on page 5](#).

Teaching the Actuator (Ability to Learn an Additional Actuator)

1. Power up the sensor and bring an actuator into the sensing range.
2. Leave the actuator in the sensing field for a minimum of two minutes.
3. Learn is complete.

IMPORTANT The sensor can learn a new actuator up to eight times. The Status/Diag indicator blinks the number of actuators left that a sensor can learn.

The sensor automatically starts the learning process as soon as an actuator is brought into the sensing range.

Learning Sequence

- | | |
|-----------------------|--|
| 1. Target present | Status/Diag indicator blinking green 2 Hz rate (15 s) |
| 2. Verifying actuator | Status/Diag indicator blinking green/red 1 Hz rate (15 s) |
| 3. Program sensor | Status/Diag indicator blinking green/red 2 Hz rate (15 s) |
| 4. Program complete | Status/Diag indicator blinking green 2 Hz rate (number of learns remaining) (15 s) |
| 5. Ready state | Status/Diag indicator solid green |
| 6. Learn is complete | |

Teaching the Unique Actuator (One Time Learn Only; Unit Locked)

Initially Teaching in the Actuator

The sensor automatically starts the learning process as soon as an actuator is brought into the sensing range.

Learning Sequence

- | | |
|---|--|
| 1. Target present | Status/Diag indicator blinking green 2 Hz rate (15 s) |
| 2. Verifying actuator | Status/Diag indicator blinking green/red 1 Hz rate (15 s) |
| 3. Program sensor | Status/Diag indicator blinking green/red 2 Hz rate (15 s) |
| 4. Program locking | Status/Diag indicator blinking green 2 Hz rate (number of learns remaining) (15 s) |
| 5. Remove the actuator from the sensing field | Status/Diag indicator changes to solid red |

- | | |
|---|--|
| 6. Replace the actuator back into the sensing field | Status/Diag indicator continues blinking green 2 Hz rate (number of learns remaining), this action triggers the lock function. |
| 7. Ready state | Status/Diag indicator solid green |
| 8. Learn is complete | Sensor is locked and cannot learn another actuator. |

Learning a New Actuator (Unique Coded Actuator Only)

To learn a replacement actuator, bring the actuator to be taught into the sensing range of the safety switch.

The learn sequence is the same as the sequence for teaching the actuator (ability to learn an additional actuator).

A sensor cannot relearn a previously learned actuator or a standard SensaGuard actuator.


The sensor only recognizes the most recently learned actuator.

Unique Coded Diagnostic

Error codes for learning process. Power cycle to clear fault.

Status/Diag Indicator—Flashes (2 Hz)	Error Code
Green	OSSD inputs not valid
Red-Red-Red-Green	Cannot learn a standard SensaGuard actuator
Red-Red-Red-Green-Green	Actuator already learned
Red-Red-Red-Green-Green-Green	Bad RFID; Target that is moved out of range
Red-Red-Red-Green-Green-Green-Green	Exceeded learning eight actuators
Red-Red-Red-Green-Green-Green-Green-Green	Unit locked: Cannot learn another actuator


Figure 6 - OSSD Test Pulses

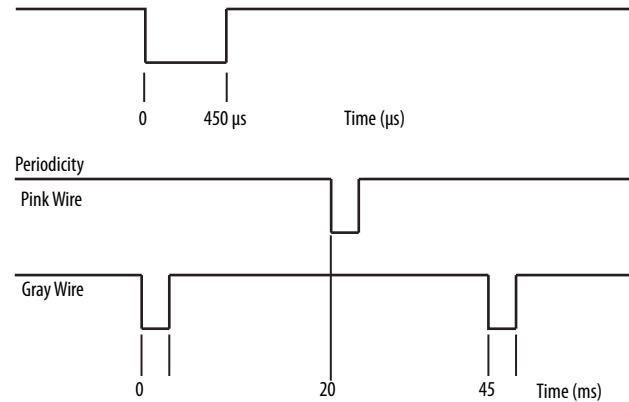

Individual Pulses


Test pulses appear on each OSSD output. These pulses are approximately every 45 ms. The times that are shown are approximate and depend on the processing of the safety-related status.

Figure 7 - Timing Diagram

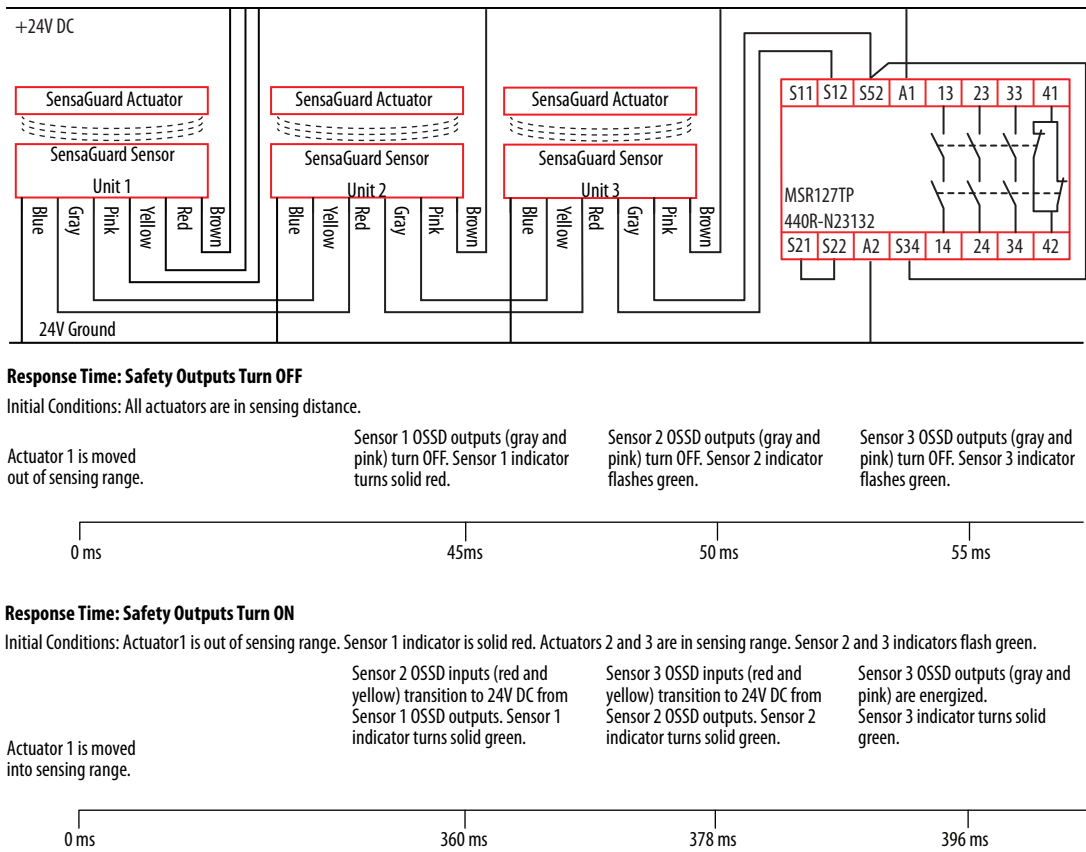


Troubleshooting

Figure 8 - Series Circuit

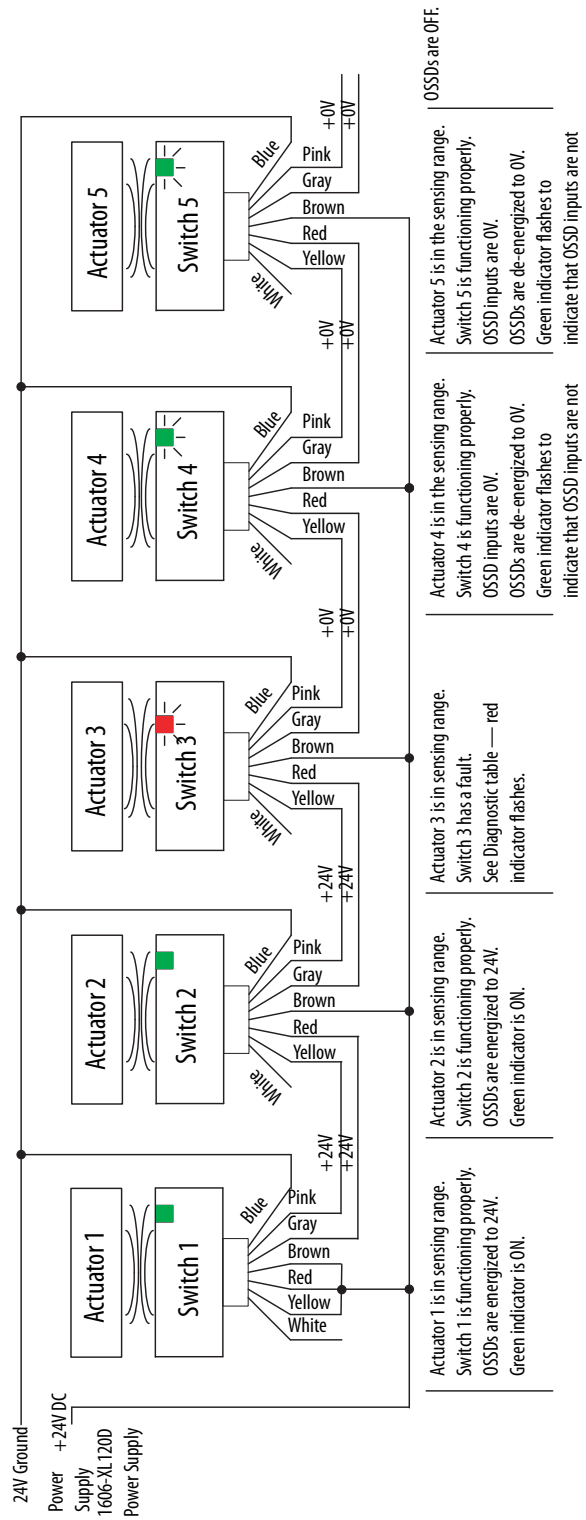


Application Wiring Examples


Figure 9 - Wiring to MSR127 Safety Relay

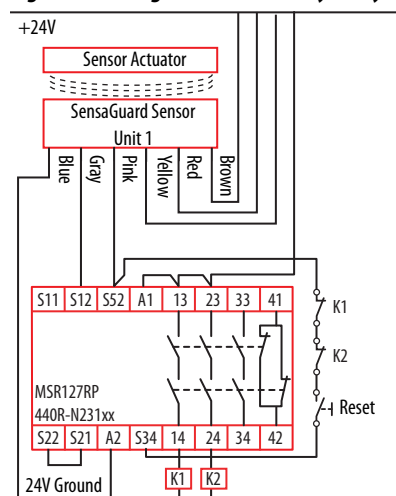


MSR127RP with one sensor, monitored manual reset, drives 100S or 700S safety relays.

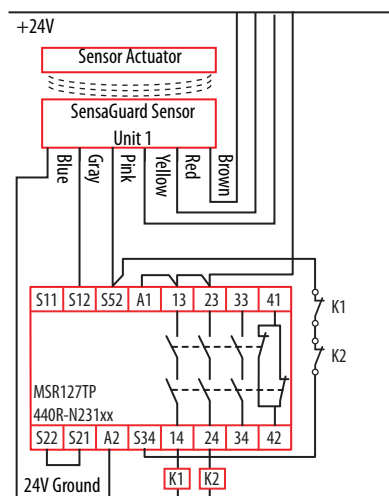

MSR127TP with one sensor, automatic reset, drives 100S or 700S safety relays.

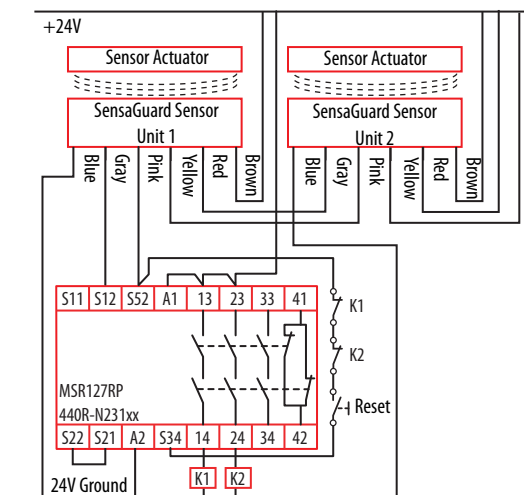

MSR127RP with one sensor, monitored manual reset, drives the 100S or 700S safety relays.

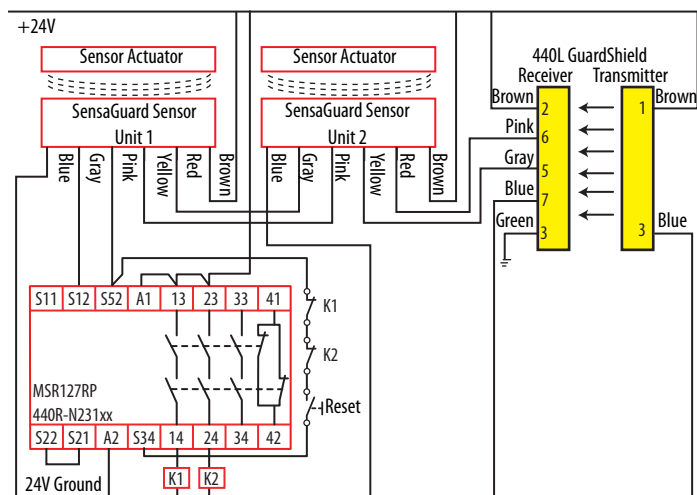

MSR127RP with two sensors and one 440L light curtain in series, monitored manual reset, drives the 100S or 700S safety relays.

IMPORTANT The light curtain must be last (the furthest from MSR127).

Figure 10 - Guardmaster® SI or DI Safety Relay Wiring


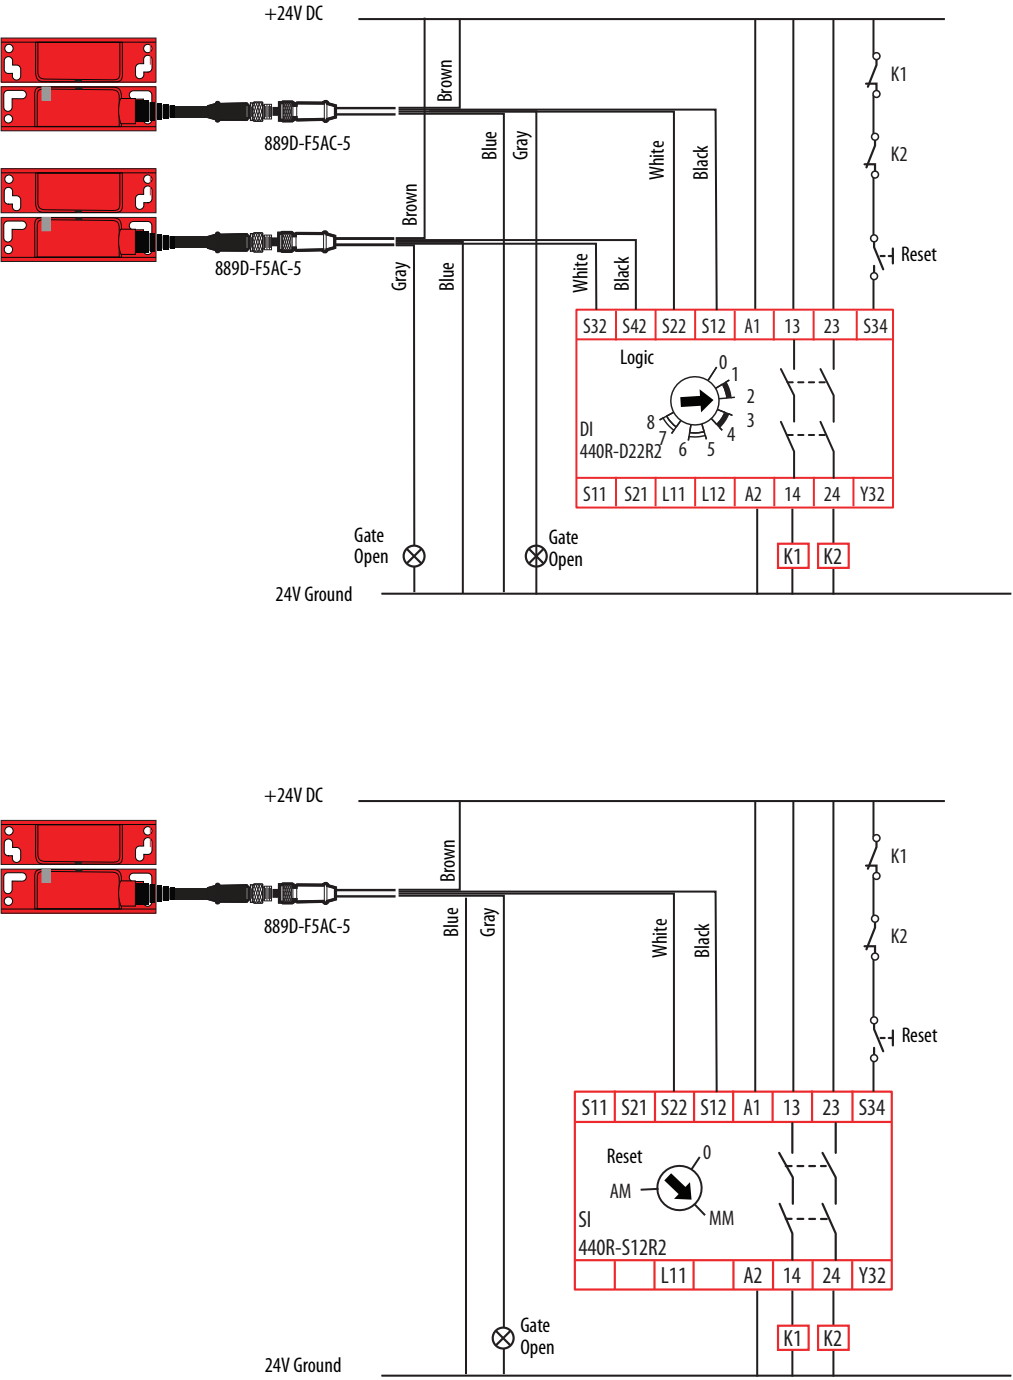


Figure 11 - Guardmaster SI or DI Safety Relay Wiring

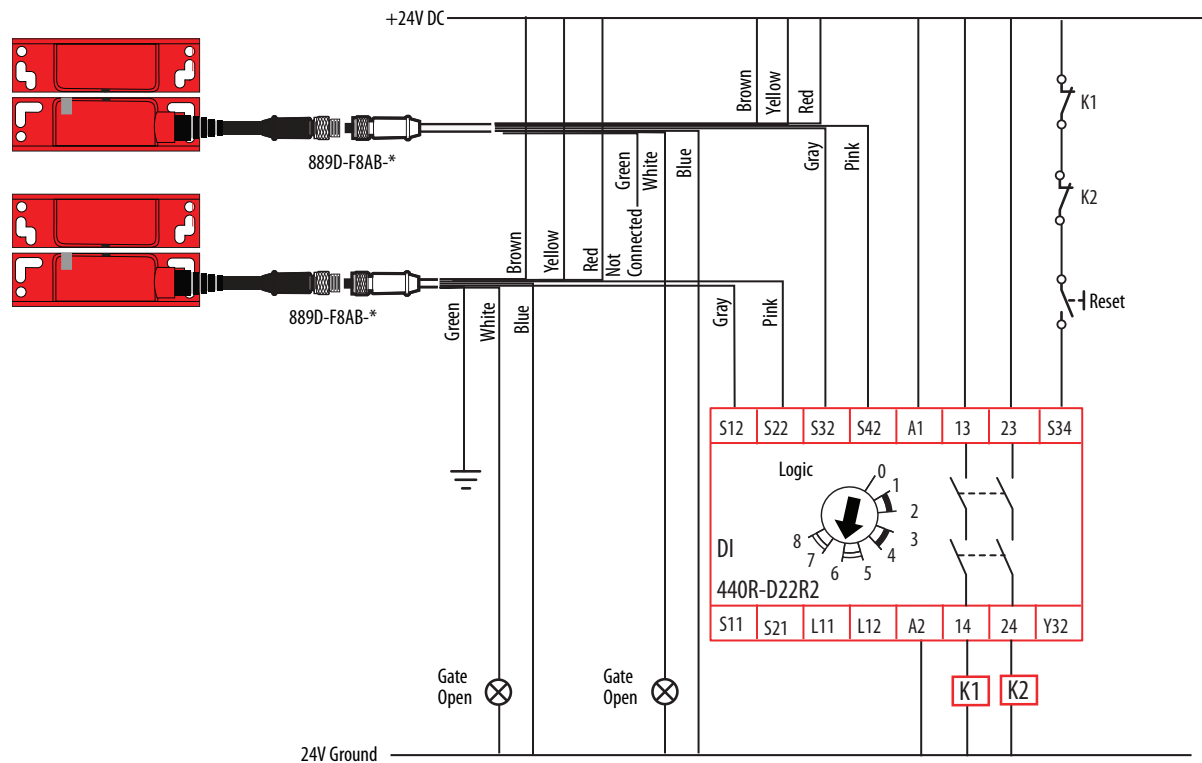

IMPORTANT The green wire is connected to the housing of the stainless steel SensaGuard only; it has no connection for plastic SensaGuard.

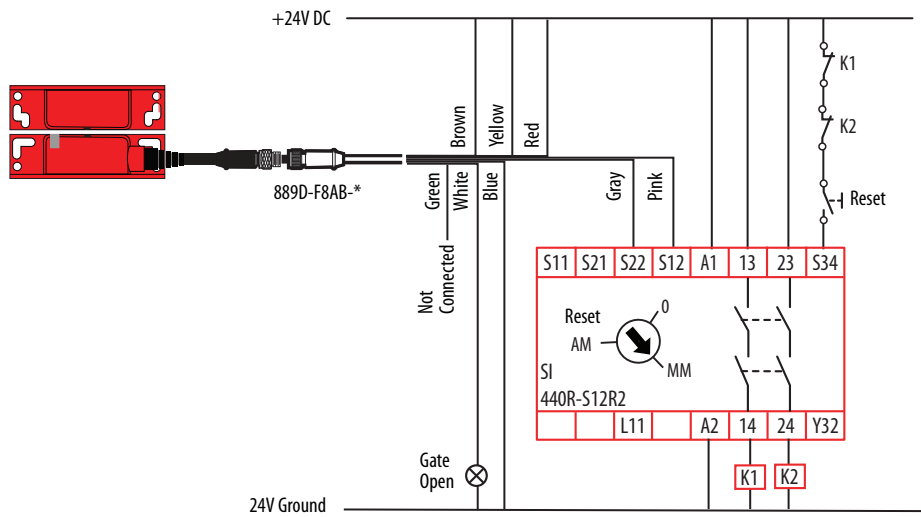


Figure 12 - CR30 Software Configurable Relay Wiring



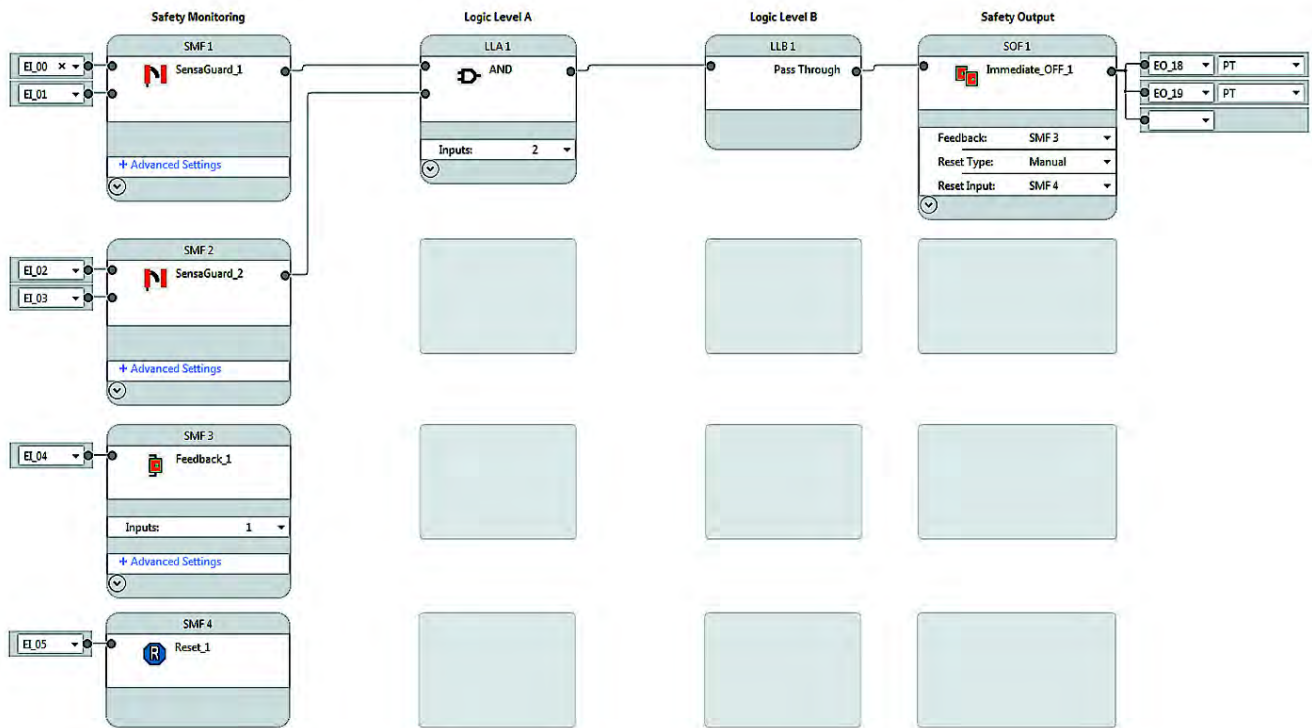



Figure 13 - 1734 POINT Guard I/O™ Wiring

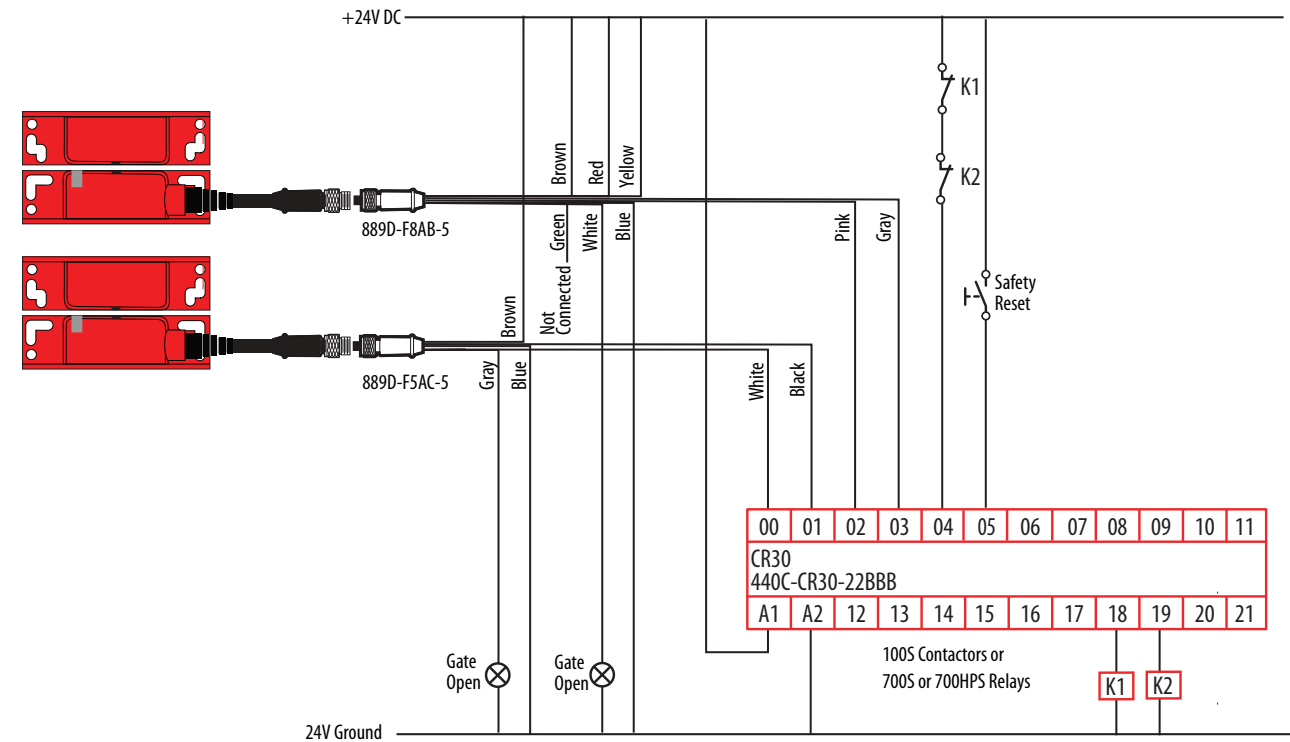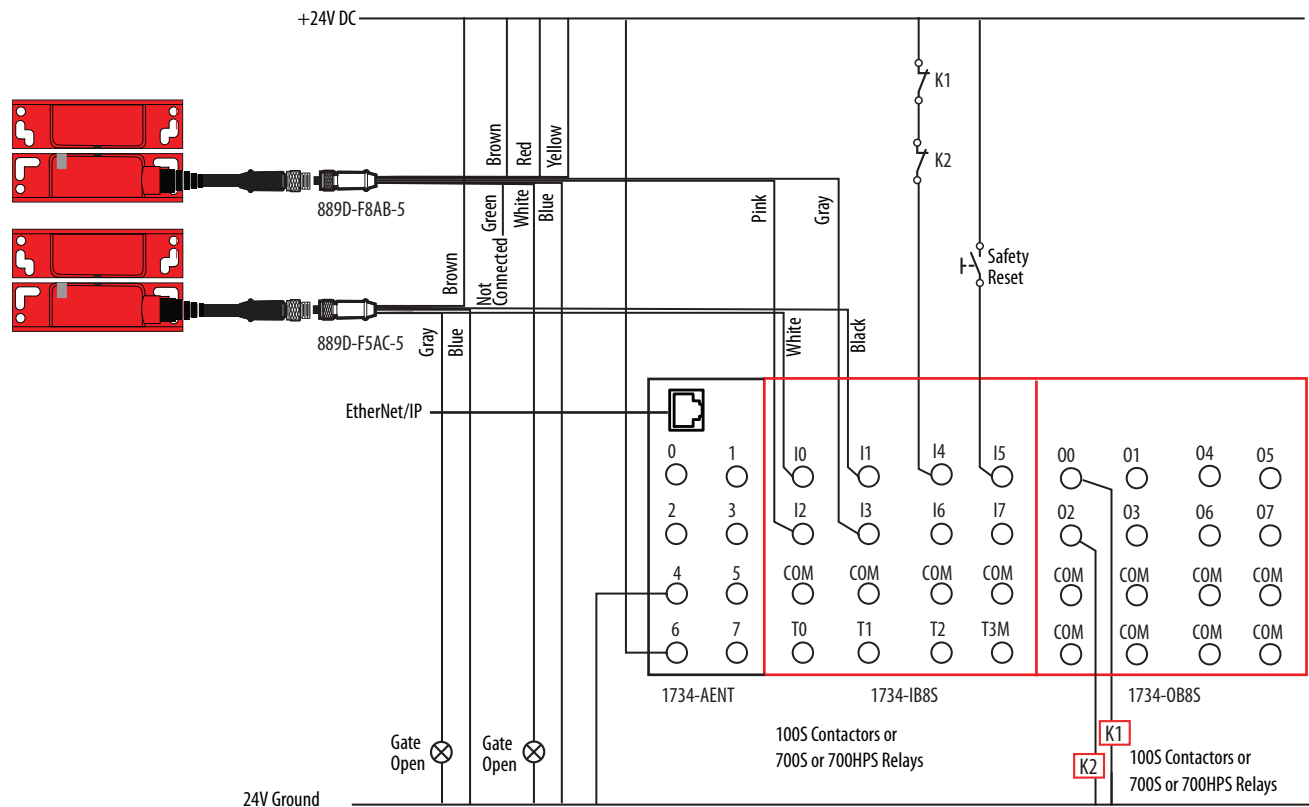

General		Connection		Safety		Module Info		Input Configuration		Test Output	
Point	Point Operation			Point Mode	Test Source	Input Delay Time (ms)					
	Type	Discrepancy Time (ms)	Off->On			On->Off					
0	Equivalent	▼	10	▲ Safety	▼ None	0	6				
1		▼		▼ Safety	▼ None	0	6				
2	Equivalent	▼	10	▲ Safety	▼ None	0	6				
3		▼		▼ Safety	▼ None	0	6				
4	Single	▼	0	▲ Standard	▼ None	0	0				
5		▼		▼ Standard	▼ None	0	0				
6	Single	▼	0	▲ Not Used	▼ None	0	0				
7		▼		▼ Not Used	▼ None	0	0				

Set On->Off Input Delay Time to 6ms to ignore the SenaGuard OSSD output test pulses

Figure 14 - 1732DS/ES ArmorBlock® Guard Safety I/O Wiring

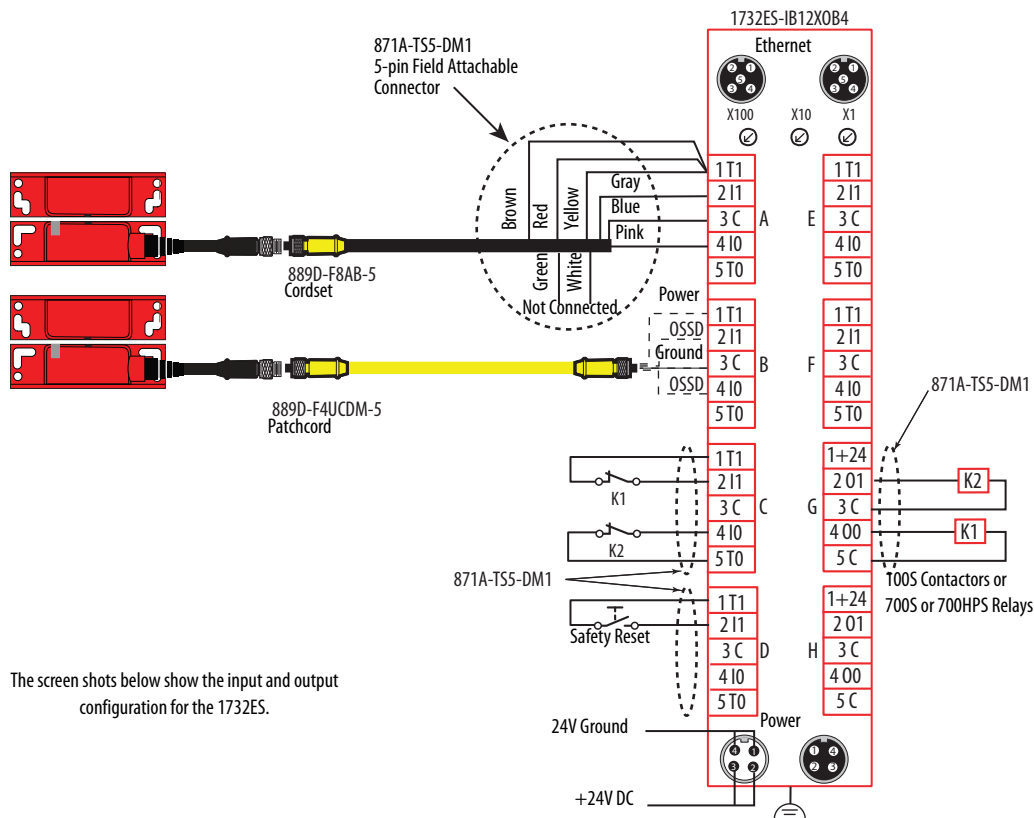

The screen shots below show the input and output configuration for the 1732ES.

Module Info Internet Protocol Port Configuration Network Input Configuration Test Output Output Configuration							
Point	Point Operation		Point Mode	Test Source	Input Delay Time (ms)		
	Type	Discrepancy Time (ms)			Off->On	On->Off	
0	Equivalent	10	Safety	None	0	6	
1			Safety	None	0	6	
2	Equivalent	10	Safety	None	0	6	
3			Safety	None	0	6	
4	Equivalent	10	Safety Pulse Test	4	0	0	
5			Safety Pulse Test	5	0	0	
6	Single	0	Standard	None	0	0	
7			Not Used	None	0	0	
8	Single	0	Not Used	None	0	0	
9			Not Used	None	0	0	
10	Single	0	Not Used	None	0	0	
11			Not Used	None	0	0	

Module Info

Internet Protocol

Port Configuration

Network

Input Configuration

Test Output

Output Configuration

Point	Point Mode
0	Not Used
1	Power Supply
2	Not Used
3	Power Supply
4	Pulse Test
5	Pulse Test
6	Not Used
7	Power Supply

Safety | Module Info | Internet Protocol | Port Configuration | Network | Input Configuration | Test Output | Output Configuration

Point	Point Operation		Point Mode
	Type		
0	Dual	▼	Safety ▼
1			Safety ▼
2	Dual	▼	Not Used ▼
3			Not Used ▼

Recommended Safety Control Interfaces

Recommended relays are GSR DI, GSR DIS, GSR SI, CR30, MSR126, MSR127, MSR131, MSR138, SmartGuard™ controller, 1791DS/ES CompactBlock™ Guard I/O™, 1732DS/ES ArmorBlock Guard I/O, 1734 POINT Guard I/O.

Maintenance

Every Month

Check the correct operation of the switching circuit. Also check for signs of abuse or interference. Inspect the switch casing for damage.

Every Five Years

Check the correct operation of the switching circuit. Also check for signs of abuse or interference. Inspect the switch casing for damage. The switch must be disconnected and readjusted.

Repair

If there is any malfunction or damage, no attempts at repair can be made. The unit must be replaced before machine operation is allowed.

Declaration of Conformity

This declaration is to declare that the products that are shown in this document conform with the Essential Health and Safety Requirement (EHSRs) of the European Machinery Directive 2006/42/EC.

Visit <https://www.rockwellautomation.com/global/certification/overview.page>

Notes:

Rockwell Automation Support

Use the following resources to access support information.

Technical Support Center	Knowledgebase Articles, How-to Videos, FAQs, Chat, User Forums, and Product Notification Updates.	https://rockwellautomation.custhelp.com/
Local Technical Support Phone Numbers	Locate the phone number for your country.	http://www.rockwellautomation.com/global/support/get-support-now.page
Direct Dial Codes	Find the Direct Dial Code for your product. Use the code to route your call directly to a technical support engineer.	http://www.rockwellautomation.com/global/support/direct-dial.page
Literature Library	Installation Instructions, Manuals, Brochures, and Technical Data.	http://www.rockwellautomation.com/global/literature-library/overview.page
Product Compatibility and Download Center (PCDC)	Get help determining how products interact, check features and capabilities, and find associated firmware.	http://www.rockwellautomation.com/global/support/pcdc.page

Documentation Feedback

Your comments will help us serve your documentation needs better. If you have any suggestions on how to improve this document, complete the How Are We Doing? form at http://literature.rockwellautomation.com/idc/groups/literature/documents/du/ra-du002_-en-e.pdf.

Waste Electrical and Electronic Equipment (WEEE)



At the end of life, this equipment should be collected separately from any unsorted municipal waste.

Rockwell Automation maintains current product environmental information on its website at <http://www.rockwellautomation.com/rockwellautomation/about-us/sustainability-ethics/product-environmental-compliance.page>.

Allen-Bradley, ArmorBlock, Guard I/O, Guardmaster, GuardShield, POINT Guard I/O, SensaGuard, and Rockwell Automation are trademarks of Rockwell Automation, Inc. Trademarks not belonging to Rockwell Automation are property of their respective companies.

Rockwell Otomasyon Ticaret A.Ş., Kar Plaza İş Merkezi E Blok Kat:6 34752 İçerenköy, İstanbul, Tel: +90 (216) 5698400

www.rockwellautomation.com

Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444
Europe/Middle East/Africa: Rockwell Automation NV, Pegasus Park, De Kleetlaan 12a, 1831 Diegem, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846
Publication 440N-IN018B-EN-P - April 2019

Supersedes Publication 440N-IN018A-EN-P - May 2018



PN-474220

PN-474220

10003829146 Ver 01

Copyright © 2019 Rockwell Automation, Inc. All rights reserved. Printed in the U.S.A.