

GPSA, **GPSS** series

Ordering code

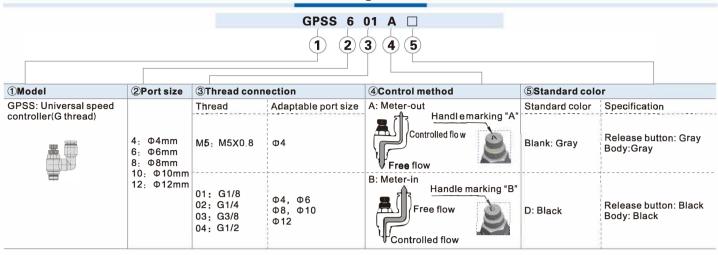

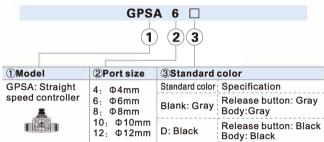

Product feature

- 1. The silencer is small size, and light weight with small installation space.
- 2. Excellent flow charatentics, high sensitivity and easy to adjust.
- The silencer brass body adopts a special nickel-plating process, which has good corrosion resistance and anti-pollution property.
- 4. Anti-drop structure is designed on the regulating rod.
- The sealant being coated on threaded portion can ensure no leakage of the threaded connection part.
- 6. The inserting direction of universal speed controller can be adjusted in 360° $_{\odot}$

Specification

0~10kgf/cm²(0~1.0MPa)
-750mmHg(10Torr)
1.5MPa
-20~70
Soft nylon or polyurethane
Gray/black

Table for interface port and tube O.D.

Product	Thursday.	Port size								
series	Thread type	Φ4	Φ6	Φ8	Ф10	Ф12				
GPSA	-	•	•	•	•	•				
	M5	•								
	G1/8		•	•						
GPSS	G1/4		•	•	•					
	G3/8				•	•				
	G1/2					•				


Symbol








Inner structure

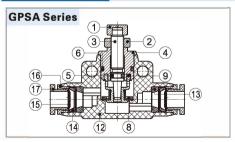


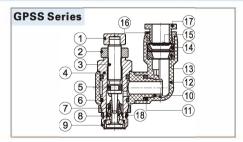

NO.	Name	Material	NO.	Name	Material	NO.	Name	Material
1	Adjusting cap	Aluminum alloy	7	Holder	PBT	13	O-ring	NBR
2	Locking cap	Aluminum alloy	8	O-ring	NBR	14	Locating seat	РОМ
3	Throttling column	Brass	9	Throttling sleeve	Aluminum alloy/Brass	15	Spring gasket	Stainless steel
4	Throttling body	Brass	10	Plastic body	PBT	16	Locating ring	Aluminum alloy
5	O-ring	NBR	11	O-ring	NBR	17	Plastic interface	РОМ
6	O-ring	NBR	12	Plastic body	PBT	18	O-ring	NBR


GPSA, GPSS series

Dimensions

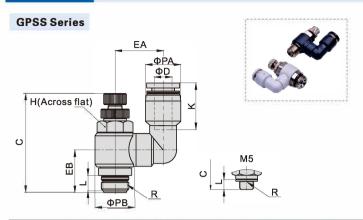

Model\Item	Φ.D	В	ФПА	ФРВ		C	;	V	V	K EA	EA	ED	н	Weight	PCS/bag
[Note1]	ΦD	R	ΨΡΑ	ΨΡΒ	_	max	min	,	EA	EB	н	(g)	PCS/bag		
GPSS4M5□	4	M5×0.8	9	10	3.5	30	27.5	14	12.5	9.5	8	8.1	2		
GPSS601□	6	G1/8	12.5	14	5.5	41.5	35	17	17	15	11	19	2		
GPSS602□	О	G1/4	12.5	18	6.5	47.5	41	17	19	17.5	14	34.7	2		
GPSS801□	8	G1/8	15	14	5.5	41.5	35	18.5	17	15	11	20.2	2		
GPSS802□	0	G1/4	15	18	6.5	47.5	41	18.5	19	17.5	14	39.8	2		
GPSS1002□	40	G1/4	18	18	6.5	47.5	41	21	20.5	17.5	14	37.2	2		
GPSS1003□	10	G3/8	18	22.5	7	52.5	45.5	21	24	20	19	66	2		
GPSS1203□	40	G3/8	21	22.5	7	52.5	45.5	23	25.5	20	19	69.2	2		
GPSS1204□	12	G1/2	21	28	8.5	58.5	51.5	23	28	25	24	105.8	2		

[Note1] "□" stands for A or B. A indicates meter-out type while B indicates meter-in type. The two types are with the same overall dimension.

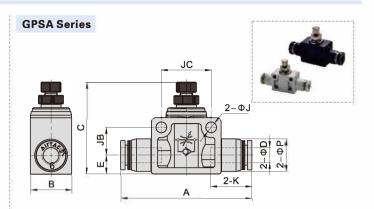



Model\ltem	A D	ΦD	A D	Α.	В			ФР	_	V	Φ.	ID	10	Weight	DCC/bas
Modellitem	Ψυ	A	В	max	min	nin WP		r.	Ψ	JD	36	(g)	PCS/bag		
GPSA4	4	41	11	29	26.5	9.5	7	14	3.2	6	14	7.85	2		
GPSA6	6	52.5	16.5	43.5	36.5	13	7.5	16.5	4.3	11	20	18.3	2		
GPSA8	8	59.5	16.5	47	40	15	8.5	18.5	4.3	11	22	23.5	2		
GPSA10	10	69	21	53.5	46.5	18	10.5	21	4.3	14.5	26	42.4	2		
GPSA12	12	78.5	26	58.5	51	21.5	12	23	4.3	17.5	32	67.5	2		


GPSA, **GPSS** series


Flowrate characteristic


Controlled flow rate

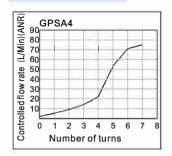


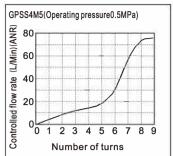


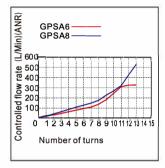


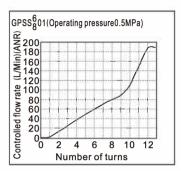

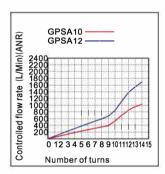


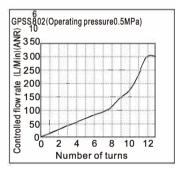


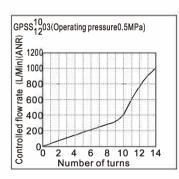


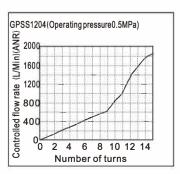



Free flow rate

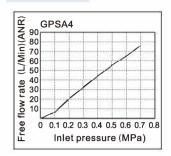


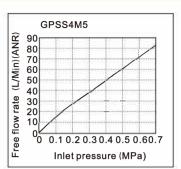


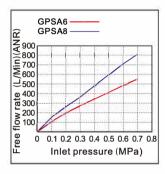


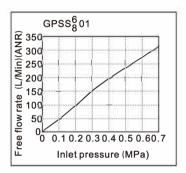

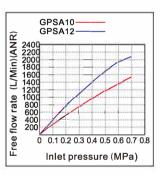

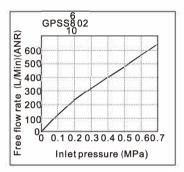

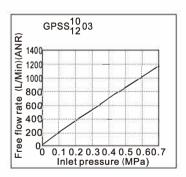

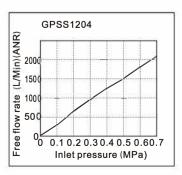


GPSA, **GPSS** series


Selection, Installation and Operation

Selection

1. The speed controller has meter-out type and meter-in type:

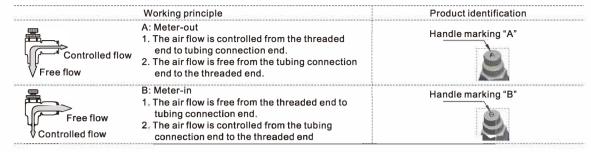

 2. Select the different control method according to the actual requirement. The meter-out type is the first priority.



Installation

- 1. Installation and removal of tubing:
 - 1.1. Installation of tubing

Grasp the tubing and slowly push it into the fitting until it comes to a stop. The tubing will be locked by the spring gasket.

1.2. Removal of tubing

Push the release button to open the spring gasket so that the tubing can be released. Note: When remove the tubing, make sure the pressure in the tubing is Zero.

2. Mounting of the speed controller

Mount the speed controller into the inlet and outlet port of the cylinder with a wrench. Note: Please refer to the fittings for the tightening torque and thread screw-in depth.







Operation

- 1. Adjustment of the cylinder speed
 - 1.1. Make sure the speed controller is turned off before applying air pressure. The cylinder may fly out due to the high speed if the air is inlet when the speed controller is turned on.
 - 1.2. Adjust the speed by opening the needle slowly from the fully closed state. When a needle valve is turned clockwise, the air flow through is reduced and the actuator speed decreases. When a needle valve is turned counter-clockwise, the air flow through is increased and the actuator speed increases.





- 2. Operation of the speed controller
 - 2.1. Do not use tools such as pliers to rotate the handle. Do not apply excessive force or shock when the needle is at the place of top or bottom. It can cause damage or air leakage.
 - 2.2. A certain amount of leakage is allowed in the closed state of the speed controller. It is not designed for the use as stop valve with zero air leakage.

